

Universal Remote Control Instructions

Select an Activity from the **Main** page of options. (ex. Cox Cable)

The system will be configured to the activity you've selected.

Battery

Indicates battery level left

System Off

Powers down the system with one button press

Activity Keys

Use these to select what you want to watch or listen to

Page

Scrolls through pages of additional commands

Main

Press to select what you want to watch

Volume & Mute

Adjusts audio levels

Channel

Used for changing single channels or tracks

Navigation

Allows for moving around menus

Guide, Menu Info, Exit

Transport

Commands such as Play, Stop, Pause and Record

Numerical Keys

Here are the number keys which allow for direct access to particular channels or stations

Press the **System OFF** button for the system to shutdown. The system will turn off and be ready for the next time you use it.



Model # MX-1200

Steps:

- 1 Press the **Main** button to return remote to the Main Page.
- 2 On the touchscreen press one of the 4 activities:
Watch Cable TV, Watch Bluray, Watch Apple TV, Watch Netflix
- 3 Use the VOL+, VOL-, and MUTE buttons to adjust the sound.
- 4 Use the CH+, CH- and PREV. CH buttons to change the channel.
- 5 Use the Numerical Keys to enter the channel number directly.
- 6 Press the System Off button to shutdown the system.
- 7 Use the Page buttons to scroll through pages of additional commands on the display screen.
- 8 Use the Guide and Menu buttons plus the up, down, left, right cursor buttons to navigate menus displayed on the TV screen.
- 9 Place the remote control back on the charging stand when not in use.

Troubleshooting:



Panamax MR4315-PRO

circuit breaker

Problem:

If the MX-1200 remote does not function correctly, then locate The Panamax power manager in the lower cabinet as pictured above.

Solution:

Flip the circuit breaker off and then back on to reboot the system.

Problem:

If the iPad CC remote App does not function correctly, then locate The Panamax power manager in the lower cabinet as pictured above.

Solution:

Flip the circuit breaker off and then back on to reboot the system.

Problem:

If the Status light on the URC MRX-2 base station is continuously blinking. Then locate the Panamax power manager in the lower cabinet as pictured above.

Solution:

Flip the circuit breaker off and then back on to reboot the system.

Problem:

If the cable box does not display any picture or not produce any sound.

Solution:

Make sure the cable box is turned on by pressing the power button.