


# Intercomm Station Control Instructions

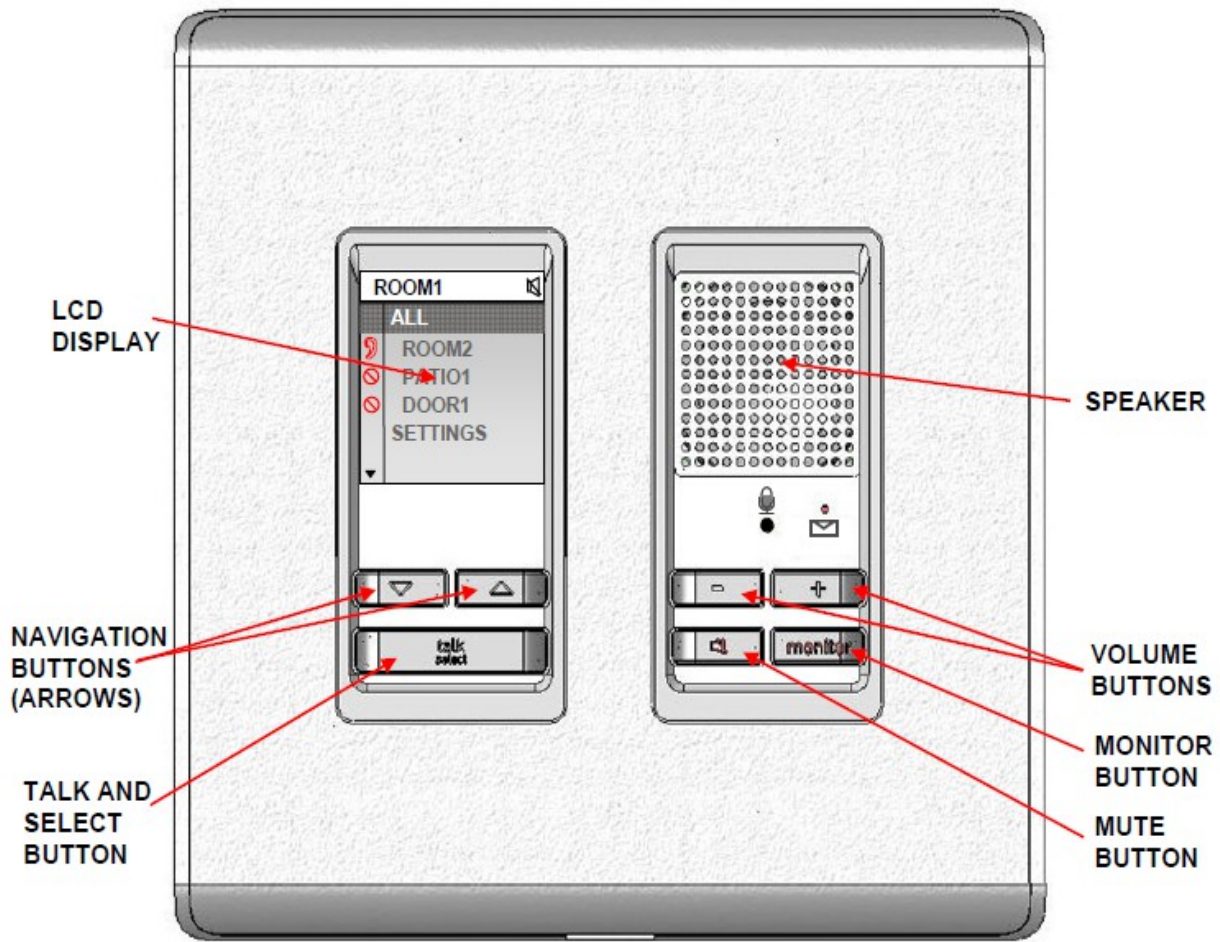

## **How to Page or “ALL” Call**

Press arrow buttons to highlight “ALL”.

Press and Hold TALK/SELECT button and speak:

All Units not in MUTE or MONITOR mode, or on a selective call with someone else will hear a tone when TALK/SELECT button is pressed and then hear you speak: (DOOR Units do not receive Pages).

When TALK/SELECT button is released, a second tone is heard at receiving units, indicating that receiving Units have 10 seconds (default) of hands-free reply time. At the end of this hands-free time a third tone is heard to define the end of the call.

## **How to Reply to a Page**

The receiver of a Page will hear a tone when the sender presses TALK/SELECT and then the sender talking to them.

The receiver of the Page will see their display highlight the location of the sender of the Page.

When the sender releases the TALK/SELECT Button, a second tone is heard, Receiver now has 10 seconds (default) of hands-free reply time.

At the end of this hands-free time a third tone is heard to define the end of the call. The only way to exit a Page early, is to press the MUTE button:

## **How to Selectively Call a Location**

Press the arrow buttons to highlight the location you want to call.

Press and hold the TALK/SELECT button and speak.

When you press the button, a tone will be heard at the receiving unit to tell them you are beginning to talk.

When you release the button, a second tone is heard at the receiving unit to let them know you have finished speaking and their 10 seconds (default) hands-free reply time has started.

At the end of 10 second time, a third tone is heard at the receiving Unit to define the end of the call.

If the Unit you attempt to Selectively Call is in MUTE mode, the sender will see this screen for 2 seconds.

The display changes back to normal after the 2 second period.